



Instruction how to replace filters and the frequency

For counter top and under the counter single, double, triple system

Installation for counter top systems:

1. Remove original faucet aerator. 2. Install the diverter swivel valve onto your faucet, if you have internal threads, please use adapter provided. 3. Rotate spout to the desired position. 4. Place system conveniently next to the sink. 5. Turn cold water on, pull the button from the diverter valve toward you (out) This will allow the water to be diverted from the faucet to the system. 6. Allow water to run for min. of 5-8 minutes, to wash carbon fines out and to release the air out of the system. 7. To turn the system off, turn the cold water off, simply push the diverted button inward. **Caution:** Cold water only into the system, never hot

To change filters:

Note: If the filter has only one O ring, it must face into the housing toward the base of the unit, if the filter has 2-O rings, it doesn't matter which way the filter goes in, because both sides are identical.

1. First off turn cold water supply off to the system. 2. Take the unit and lay it down on the counter, with the base to your left, faucet toward the sink. 3. Turn the faucet away from you, so it is not in your way, hold the base with your left hand, right hand on the wrench 4. Take the wrench, of which we supplied to you 5. Wrap the wrench around each and every housing (the plastic container of which holds the filters). 6. Turn the wrench **to the left(toward you)** to loosen the housing, **be careful, there is water in every housing** 7. The rest you do it by hand, unscrew each housing, over the sink, wash each housing clean before you insert new filters in, and replace each filter, the same way as you take the old ones out.

Item #251 to be replaced every 9-12 months (for single, double and triple system)

Item #1017 Alkaline filter to bring the pH higher from 6.5 up to 9.8 for better health, to replace every 12 months, for triple systems

Item #301 to be replaced every 4-6 months or when the water flow gets reduced. (this and the above filter is for the double and triple system). Water out to the faucet

Item #1012 to be replaced every 4-6 months, this is for the three stage system, by the red tubing water in

8. Be sure that all the housings are snugly tight.

9. Turn the water back on to the system

10. You must run the water for minimum of 5-8 minutes to wash the carbon fines out.

For under the counter system, single, double, triple

For installation, please refer to a separate sheet enclosed

1. Turn the water supply off to the system
2. Turn the pure water faucet on to release the pressure from the system

Follow #4, to 7 as above instructions.

3. Be sure you have a bucket ready, as the housing will have water in it
4. Before you replace filter, wash housing. Replace all filters as indicated, be sure that all housings are nice and snug hand tide to prevent any leaks
5. Flush all filters out for 5-8 minutes, check for leaks.

You are now ready to enjoy, pure, fresh water for drinking , cooking, plants, pets.

Note: All filters come with a gasket or an O ring, each housing has an O ring situated, approximately 1-1/2inches from the open end of the housing. Be sure that all gaskets and O rings are in their correct position.

As always: Be Healthy

Aquasmart Technologies Inc.

3122 Beta Avenue, Burnaby, B.C. Canada V5G 4K4

Phone: (604) 294-4041 Fax (604) 294-0710 Toll Free: 1-888-294-3636

E-mail: emily@aquasmart.com Website: www.aquasmart.com